

Midi retrofit for LINN LM-2 (LINNDRUM)

DIPSWITCH configuration


The dipswitch on the PCB can be used to configure the MIDI channel

The dipswitch A and B have no function

To select the MIDI channel please select one of the following configurations:

0 = OFF, switch down

1 = ON, switch up

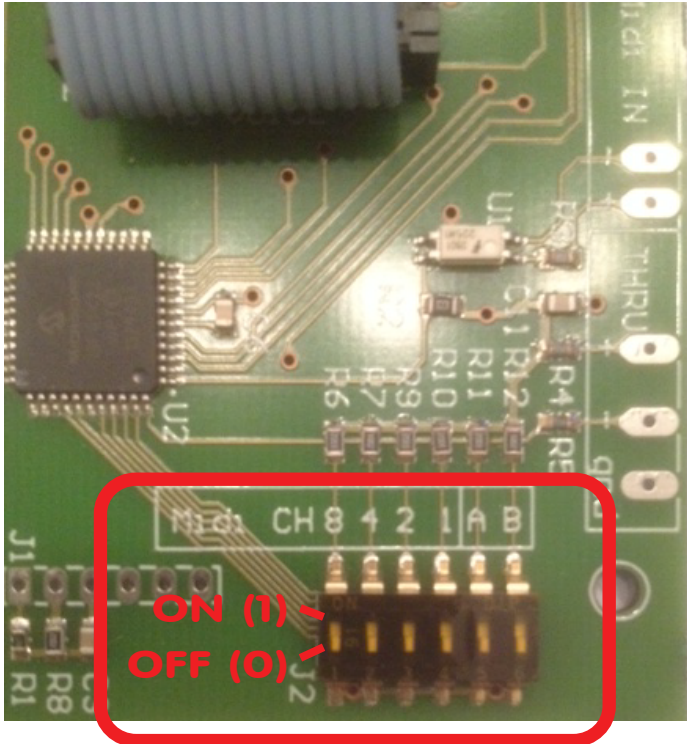

8421

0000	ch1
0001	ch2
0010	ch3
0011	ch4
0100	ch5
0101	ch6
0110	ch7
0111	ch8
1000	ch9
1001	ch10
1010	ch11
1011	ch12
1100	ch13
1101	ch14
1110	ch15
1111	ch16